

SILVA PRO

FULL VERSION MANUAL BASELIGHT 300

ART. NO: 38447



PRODUCT OVERVIEW

The packaging consists of the following parts:

- Headlamp unit
- Headband
- No batteries included
- Quick guide

BEFORE USE

HYBRID TECHNOLOGY

The battery compartment is compatible with both 3xAAA batteries and the Silva rechargeable Hybrid battery (batteries sold separately).

INSERT BATTERIES (HYBRID OR AAA)

Open the battery lid on the side of the lamp body and insert the batteries. Please note the battery polarity, printed on the inside of the battery compartment. If you don't intend to use the headlamp for several months, make sure you remove the batteries from the lamp.

HYBRID BATTERY (NOT INCLUDED)

HYBRID BATTERY CHARGING

1. A USB-C connector is located on the front of the Hybrid battery pack. Attach the included USB charge cable to this USB-C connector.
2. Connect the other end of the charging cable to a USB-port (either from a computer, car or a USB charger/adaptor connected to a wall outlet).
3. Next to the USB-C connector is a charge indication LED, showing the charging status:
 - Red light = battery is charging
 - Green light = battery is fully charged

Charge time is approximately 2.5 hours.

Note! When battery is fully charged the battery automatically switches to maintenance charge. However, never leave a battery unattended while charging.

ADJUST THE HEADBAND

The wide and elastic headband is designed to give a comfortable fit at times. Adjust the headband by moving the sliding buckle to fit it onto your head.

BUTTON LOCK

On the top of the lamp unit there is a push button which controls all light modes. This button can be locked to prevent the lamp from being lit by accident.

To activate the button lock: make sure the lamp is turned OFF, press the button with an extra long press (3 sec). A small red LED inside the lens will start flashing (not to be confused with the main red LED/red light mode that will also light up briefly). When the small red LED stops flashing and lights constantly and the main red LED turns off - the button is locked.

If you try to start lamp with button lock activated the small LED will flash red to indicate that the lamp is locked.

To deactivate the button lock: press the button with an extra long press (3 sec). The small red LED will start flashing. After 3 seconds, when the button lock is deactivated, the small LED will turn steady green. Now you can start the lamp as normal.

DURING USE

SILVA INTELLIGENT LIGHT

This lamp features Silva Intelligent Light which combines a long reach spot light with a close flood light. The lamp head is tiltable to give you the right light, exactly where you need it.

SWITCH ON YOUR HEADLAMP

On top of the headlamp body there is a push button which controls all brightness levels.

Each press on the button gives you the following light:

1. Turns the headlamp ON in max level
2. Switches to Min level
3. Starts over from 1

To turn OFF the headlamp; press and hold the button for 1 second.

Red mode is started from OFF mode by pressing and holding the button for 1 second. To turn OFF; press and hold the button for 1 second.

Red light is good for preserving the night vision.

BATTERY STATUS INDICATION

When the headlamp is turned off a small LED is turned on inside the front of the headlamp to indicate the status of the batteries. This indication will be on for 3 seconds. Please note that this indication is valid for Alkaline batteries only.

- Green light – Battery in good condition
- Orange – Medium
- Red – Battery in poor condition


AFTER USE

MAINTENANCE

To make sure you get maximum performance from your headlamp, clean it regularly with a damp cloth. Headband cleaning: rinse in warm water.

TECHNICAL SPECIFICATIONS

Weight:	51 g (1.8 oz)
Weight (Hybrid battery):	25 g (0.9 oz)
Weight (3 x AAA batteries):	33 g (1.2 oz)
Battery type:	Silva Hybrid Battery 3.8V / 1.25Ah / 4.75Wh or AAA
Water resistance:	IP55
Operative temperature range:	-20 - +60°

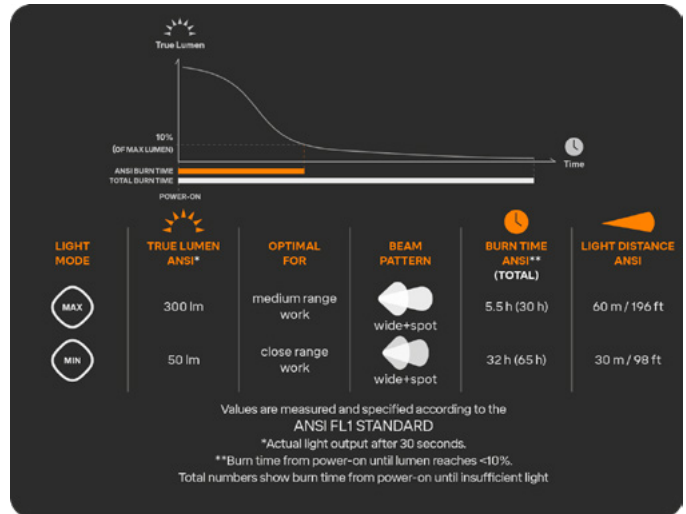

PROTECTING THE ENVIRONMENT.

Lamp unit, batteries and packaging are recyclable. Please dispose these items at designated recycling stations.

WARRANTY

Silva warrants that, for a period of two (2) years, your Silva Product will be substantially free of defects in materials and workmanship under normal use. Silva's liability under this warranty is limited to repairing or replacing the product. This limited warranty extends only to the original purchaser.

If the Product proves defective during the Warranty Period, please contact the original place of purchase. Make sure to have your proof of purchase on hand when returning the product. Returns cannot be processed without the original proof of purchase. This warranty does not apply if the Product has been altered, not been installed, operated, repaired, or maintained in accordance with instructions supplied by Silva, or has been subjected to abnormal physical or electrical stress, misuse, negligence or accident. Neither does the warranty cover normal wear and tear. Silva is not responsible for any consequences, direct or indirect, or damage resultant from use of this product. In no event, will Silva's liability exceed the amount paid by you for the product. Some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. This Warranty is valid and may be processed only in the country of purchase.

For more information please visit www.silvaweden.com

